

## **Dash Bracket Install**

Thank you for purchasing our product! For more information or questions, please contact us.


You will need to pull the passenger kick panel off to access where the bracket is installed. Additionally, the glove box door will need to be removed.

Un bolt the 5/16 headed bolt holding the tab shaped plastic piece to the cab of the truck. If the plastic tab coming off the dash is not already completely broken off, you will need to cut it off flush with the dash (using cut off wheel or small saw, see photo below.)

Once that is gone, fit the bracket up to the dash and then reinstall the factory bolt that you took out so that it is *finger tight*. (You may need to push up on the dash if its sagged down) Once that bolt is in you can drill the (3) 1/4" holes into the corner of the dash and install the 3 provided button head screws to anchor the dash to the bracket.

You can now run the 1 self-tapping screw into the hole just above that factory bolt and tighten both down.

Reinstall the glove box door and the kick panel and you're done.

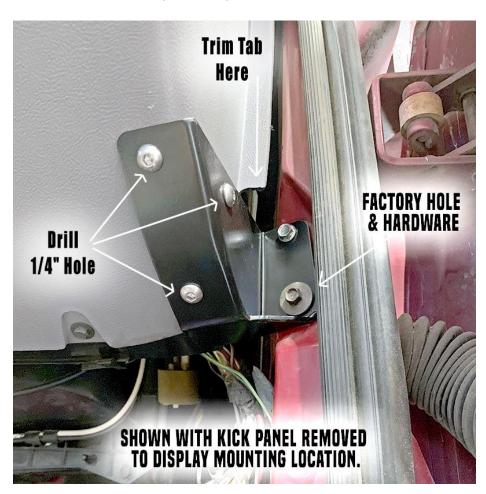

Contact us at <a href="mailto:Support@desolatemotorports.com">Support@desolatemotorports.com</a> or give us a call at (562) 698-1460 with any questions.